

# **SONALERT**

ENV-223AM

USER'S MANUAL

**DOC-068**

**Rev. 1.4**

Copyright ©2015

All Rights Reserved

Med Associates Inc.

P.O. Box 319

St. Albans, Vermont 05478

Phone: 802.527.2343

Fax: 802.527.5095


[www.med-associates.com](http://www.med-associates.com)

## CHAPTER 1 | WIRING

Connect the Sonalert to any available output on a standard Med Associates connection panel. The tone will sound when the corresponding output bit is turned "ON".


*Figure 1 – Connector Pin Out*

Molex Pin #	Function	Wire Color
1	Not Used	
2	Operate	White
3	+28 Volts	Red

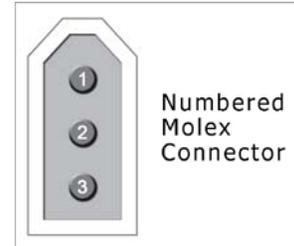

The volume of the Sonalert is factory set to 65 decibels, but it can be increased or decreased by adjusting the potentiometer on the circuit board mounted to the back of the Sonalert. The potentiometer adjusts the voltage which alters the sound pressure level. Refer to response curve in Figure 2 below.

*Figure 2 - Response Curve for ENV-223AM*

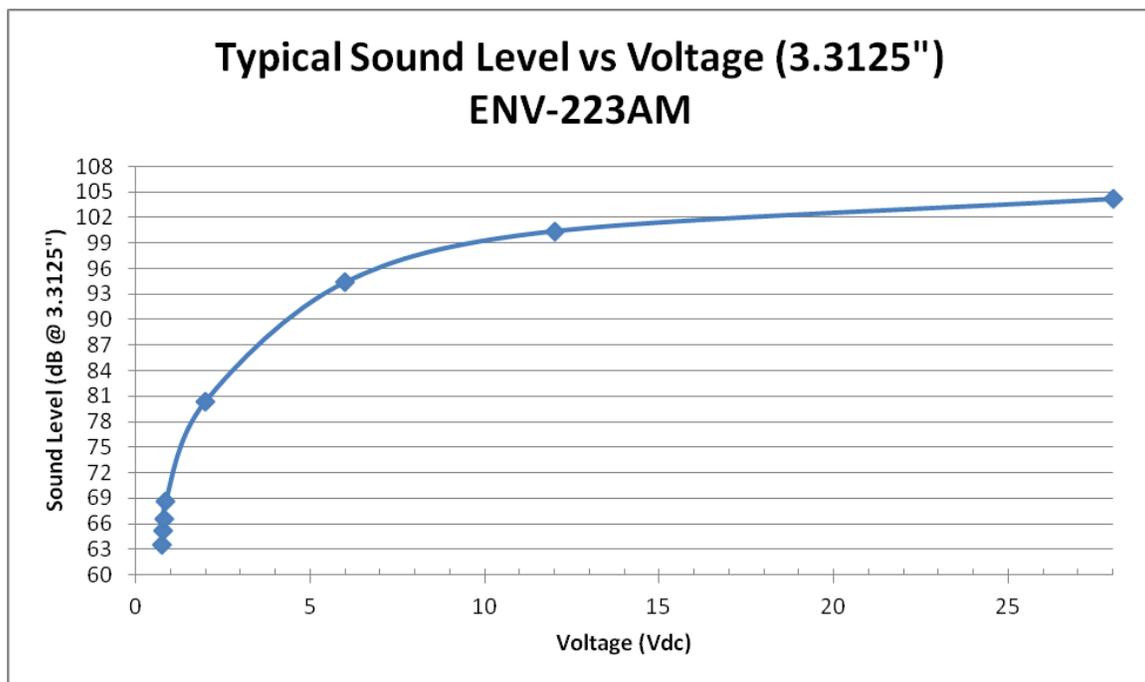

## Appendix A | Contact Information

Please contact Med Associates, Inc. for information regarding any of our products.

Visit our website at [www.med-associates.com](http://www.med-associates.com) for contact information.

For technical questions, email [support@med-associates.com](mailto:support@med-associates.com).