

SQUARE WAVE AVERSIVE STIMULATOR

ENV-416S

USER'S MANUAL

DOC-097

Rev. 1.3

Copyright ©2014
All Rights Reserved

Med Associates Inc.
P.O. Box 319
St. Albans, Vermont 05478

Phone: 802.527.2343
Fax: 802.527.5095
www.med-associates.com

notes

Table of Contents

Chapter 1 Introduction.....	1
Chapter 2 ENV-416S Front Panel	2
Power Switch	2
Manual Operate Switch	2
Unarmed/Armed Switch	2
Output Current Adjust	2
Output Current Meter	3
200 ms Safety Switch	3
Chapter 3 ENV-416S Back Panel	4
High Voltage Output	4
Grid Output Connector	4
MED Control Connector	4
TTL/ Switch Closure	5
25K Dummy Load V-out Jacks	5
Power In	5
Chapter 4 Operating Instructions	6
Adjusting the Output Current	6
Operating Instructions	7
Appendix A Contact Information.....	7

CHAPTER 1 | INTRODUCTION


The ENV-416S provides a full range of 0-10 ma aversive stimulation produced by an advanced solid-state current source. The design allows for a much safer lower source voltage.

The unit delivers an adjustable two pole or scrambled square wave. The ENV-416S features a 200 ms safety switch that can limit the aversive stimulation to a maximum of 200 ms, or the safety switch may be turned off if longer durations are desired. For grid floor applications, the grid rod floor connects to the system via a standard DB-9 connector. For bi-polar applications, such as tail aversive stimulus electrodes, the electrodes attach to the 3-prong connector on the back panel.

The unit has a self-contained power supply and can be controlled by a 28 VDC to ground signal, a 5 volt TTL signal, or a remote switch closure, thus allowing maximum flexibility.

CHAPTER 2 | ENV-416S FRONT PANEL

Figure 2.1 - ENV-416S Front Panel

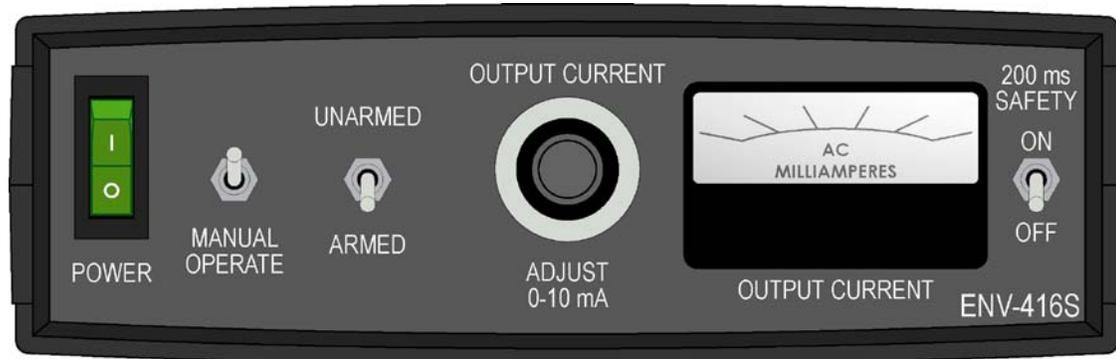

Power Switch

When switched to the ON (1) position, the power switch lights up, indicating power has been switched on to the circuit.

Manual Operate Switch

When this spring loaded switch is in its default (up) position, it allows the aversive stimulator to be enabled by a MED 28 volt control signal, a TTL active low signal or a switch closure (see below for a description of rear panel connections). When this switch is toggled to the **MANUAL OPERATE** position, an internal operate signal enables the aversive stimulator.

Unarmed/Armed Switch

When the **UNARMED/ARMED** is switched to the **UNARMED** position, the device will not function. When the UNARMED/ARMED switch is set to the **ARMED** position and no input is being received by the device, the aversive stimulus output is routed from the rear panel high voltage output connector to the internal dummy load resistor and output to the 25K-ohm **LOAD Vout** jacks on the rear panel.

The OUTPUT CURRENT meter will display the constant current output setting of the aversive stimulator, which may be adjusted using the current adjust knob.

Output Current Adjust

This ten-turn locking knob varies the output current of the aversive stimulator.

Output Current Meter


When the UNARMED/ARMED switch is in the UNARMED position, the meter will display a reading of zero. When the UNARMED/ARMED switch is set to the ARMED position, the meter displays the current through the internal dummy load. During an aversive stimulus, the meter will display a reading of zero. The aversive stimulus current administered is the same as what was displayed on the meter while adjusting the output current.

200 ms Safety Switch

The 200ms Safety switch is used to turn an internal 200ms aversive stimulus limit timer on or off. While the 200ms Safety switch is in the ON position, the maximum duration of an aversive stimulus is internally set to 200 ms. The 200ms time limit cannot be user adjusted. If an operate command inadvertently lasts longer than 200ms, the internal safety override timer will limit the aversive stimulus duration to a maximum of 200ms. If the safety switch is held in the OFF position (down), the internal 200ms time limit is disabled and an aversive stimulus can be administered as long as the operate signal is on.

CHAPTER 3 | ENV-416S BACK PANEL

Figure 3.1 - ENV-416S Back Panel

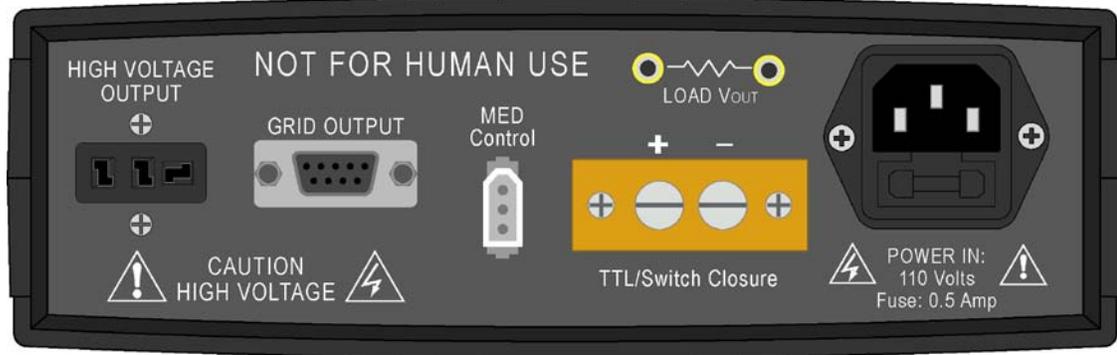

High Voltage Output

Use this 3-pin Cinch-Jones connector for aversive stimulus-delivery devices other than the grid floor. This connection is activated via either a MED control signal or a TTL switch closure.


Grid Output Connector

This DB-9 connector connects the aversive stimulus output to the grid floor. The output of this connector provides scrambled aversive stimulus across the grid rods.

MED Control Connector

The MED Control 3-pin Molex connector should be connected to any available Output on a Standard MED Connection Panel. The pin out of this connector is as follows:

Molex Pin #	Function
1	Not Used
2	Operate
3	+ 28 Volts

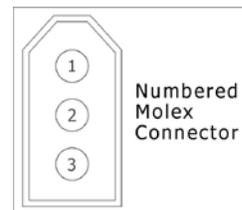

TTL/ Switch Closure

For **TTL operation**, connect the (+) terminal to an active low TTL “operate” signal and the (-) terminal to a TTL ground connection. Asserting the TTL operate signal low enables the aversive stimulator.

For Switch Closure operation, connect the screw terminals to a closure device such as a switch or relay. When the switch closure is made, the aversive stimulator is enabled.

NOTE: It is not recommended that the switch closure and the MED control signals be used (on) at the same time. Use one or the other.

25K Dummy Load V-out Jacks

These .080” pin jacks allow the user to measure the voltage across the internal 25K-ohm dummy load resistor. The UNARMED/ARMED switch must be switched to the ARMED position. If a measurement of the actual current during an aversive stimulus is desired, a sampling resistor should be placed in series with the output and an oscilloscope could be used to monitor the current. Contact the factory for further details.

Power In

This receptacle accepts a standard 110V/220V AC equipment power cord. The receptacle also contains a replaceable line fuse, as well a replacement fuse. To access the fuse, remove the power cord and place a small straight blade screwdriver into the slot under the fuse drawer. Slide the fuse drawer out to access the fuse.

NOTE: Use only factory recommended type replacement fuses for this unit. If in doubt, contact the factory.

CHAPTER 4 | OPERATING INSTRUCTIONS

Adjusting the Output Current

The output aversive stimulus current is set by switching the UNARMED/ARMED switch to **ARMED** and setting the 200ms Safety Switch to **OFF**. The OUTPUT CURRENT display will now display the output current through the dummy load. Turn the output current adjust knob until the desired output current is displayed.

The dummy load is a 25K-ohm internal load used as a reference for adjusting the output current. Setting the safety switch to OFF disables the 200ms safety feature and allows the internal circuitry to measure the output current accurately. The current displayed on the meter is the amount of current that will be administered during the aversive stimulus, regardless of the subjects' impedance provided that the subjects' impedance is less than 25K-ohm.

Note that a maximum of 250V output is available. So for a load of 25K-ohm the maximum output current is:

$$250V / 25K = 10mA$$

As long as the impedance of the subject is 25K-ohm or less, the set current will be administered. But, if the impedance of the subject is greater than 25K-ohm then the desired aversive stimulus current may not be properly administered. For example, if the impedance of the subject is 50Kohm and the output current is set to 10mA then the maximum output current will be:

$$250V / 50K\text{-ohm} = 5mA$$

But, if the output current is set to 5mA for the same 50K load, the output current will be 5mA.

Use the following formula to calculate the maximum output current into a load impedance greater than 25K-ohm:

$$I_{max} = 250V / Z$$

Where I_{max} is the maximum possible output current, 250V is the maximum output voltage available, and Z is the impedance of the subject. Under normal use, the subjects' impedance should be less than 25K-ohm and the adjusted output current will be properly administered.

Operating Instructions

1. Prior to using the ENV-416S ensure that the output current is set to the desired level and that the UNARMED/ARMED switch is set to **UNARMED**.
2. Connect the desired input (MED 28 volt control signal, a TTL active low signal or a switch closure).
3. Verify that the 200 ms Safety switch is in the desired position.
4. Switch the UNARMED/ARMED switch to **ARMED**.
5. The OUTPUT CURRENT meter will display the actual output current setting.
6. When the input to the device is activated, the aversive stimulus will be administered and the OUTPUT CURRENT display will read zero during the aversive stimulus.

APPENDIX A | CONTACT INFORMATION

Please contact Med Associates, Inc. for information regarding any of our products.

Visit our website at www.med-associates.com for contact information.

For technical questions, email support@med-associates.com.